

Maxi Accu - MA

600-1000-2000-3000-5000-10000 l.

EN



SAFETY INFORMATION
O&M INFORMATION
INSTALLATION MANUAL
TDS - TECHNICAL DATA SHEET

Manufactured by OSO Hotwater AS
Industriveien 1 - 3300 Hokksund - Norway
Tel: + 47 32 25 00 00 / Fax: + 47 32 25 00 90
E-mail: oso@oso.no / www.osohotwater.com

145953-02 - 03-2020



OSO HOTWATER


CONTENTS

| | |
|---|----|
| 1. Safety instructions | 3 |
| 1.1 General information | 3 |
| 1.2 Safety instructions for users | 4 |
| 1.3 Safety instructions for installers..... | 4 |
| 2. Product description | 5 |
| 2.1. Product identification | 5 |
| 2.2. Intended use..... | 5 |
| 2.3 CE marking | 5 |
| 2.4 Technical data | 5 |
| 2.5. ErP data (TDS) | 5 |
| 3. Installation instructions | 6 |
| 3.1. Products covered by these instructions | 6 |
| 3.2. Included in delivery..... | 6 |
| 3.3. Product dimensions..... | 6 |
| 3.4. Requirements for installation location . | 7 |
| 3.5. Pipe installation..... | 8 |
| 4. Initial commissioning | 10 |
| 4.1. Filling with water..... | 10 |
| 4.2. Control points | 10 |
| 4.4. Emptying of water | 10 |
| 4.5. Handover to end-user..... | 10 |
| 5. User guide | 10 |
| 5.1. Settings..... | 10 |
| 6. Troubleshooting | 10 |
| 6.1. Faults and fixes..... | 10 |
| 7. Warranty conditions | 11 |
| 7.1. Warranty and registration | 11 |
| 7.2. Customer service..... | 11 |
| 8. Removing the product | 11 |
| 8.1. Removal | 11 |
| 8.2. Returns scheme | 11 |





1. SAFETY INSTRUCTIONS

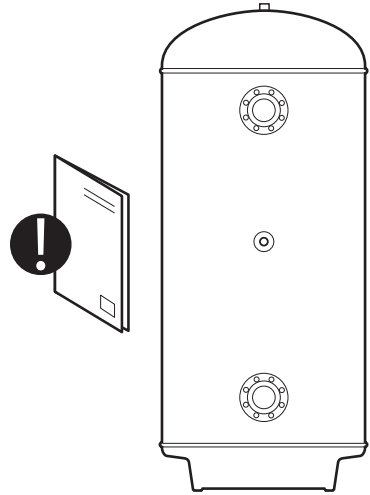1.1 General information

- Read the following safety instructions carefully before installing, maintaining or adjusting the buffer tank.
- Personal injury or material damage may result if the product is not installed or used in the intended manner.
- Keep this manual and other relevant documents where they are accessible for future reference.
- The manufacturer assumes compliance (by the end-user) with the safety, operating and maintenance instructions supplied and (by the installer) with the fitting manual and relevant standards and regulations in effect at the date of installation.











Symbols used in this manual:

| | |
|--|--|
|  WARNING | Could cause serious injury or death |
|  CAUTION | Could cause minor or moderate injury or damage to property |
|  DO NOT | |
|  DO | |





 This document should be kept in a suitable place where it is accessible for future reference.





1.2 Safety instructions for users

|  WARNING | |
|---|--|
|  | If a safety valve is fitted, the valve overflow should NOT be sealed or plugged. |
|  | The product must NOT be modified or changed from its original state. |
|  | Children must NOT play with the product or go near it without supervision. |
|  | Maintenance/settings should only be carried out by persons over 18 years of age, with sufficient understanding |

|  CAUTION | |
|---|---|
|  | The product must not be exposed to frost, over-pressure, over-voltage or chlorine treatment. See warranty provisions. |
|  | Maintenance/settings should not be carried out by persons of diminished physical or mental capacity, unless they have been instructed in the correct use by someone responsible for their safety. |

1.3 Safety instructions for installers

|  WARNING | |
|---|--|
|  | If a safety valve is fitted (included), the valve overflow should NOT be sealed or plugged. |
|  | Any overflow pipe from the safety valve MUST be ≥ 18 mm inside, clear, undamaged and frost-free with a fall to the drain. |
|  | The relevant regulations and standards, and this installation manual, must be followed. |

|  CAUTION | |
|---|---|
|  | The product should be placed in a room with a drain, in accordance with the wetroom standard / latest TEK. Alternatively, fit an automatic stop valve with sensor and overflow from safety valve to drain. Liability for consequential damage will only apply if this is followed. |
|  | The product should be properly aligned vertically and horizontally, on a floor or wall suitable for the total weight of the product when in operation. See type plate. |
|  | The product must have a clearance for servicing of 40 cm in front of front / 10 cm over the top connection. |

2. PRODUCT DESCRIPTION

2.1 Product identification

Identification details for your product can be found on the type plate fixed to the product. The type plate contains details of the product in accordance with EN 12897:2016 and EN 60335-2-21, as well as other useful data. See Declaration of Conformity at www.osohotwater.com for more information.

OSO products are designed and manufactured in accordance with:

- Pressure vessel standard EN 12897:2016
- Safety standard EN 60335-2-21
- Welding standard EN ISO 3834-2

OSO Hotwater AS is certified for

- Quality ISO 9001
- Environment ISO 14001
- Work environment ISO 45001

2.4 Technical data

| NRF no. | Product code: | Capacity, persons | Weight, kg. | Diameter x height (mm) | Freight vol. m ³ | Heating time, hours Δt 65°C | Actual vol. l. |
|----------|---------------|-------------------|-------------|------------------------|-----------------------------|-------------------------------------|----------------|
| 800 1353 | MA 600 Heat | - | 148 | ø 780x1900 | 1,28 | - | 550 |
| 800 1354 | MA 1000 Heat | - | 238 | ø1000x2100 | 2,29 | - | 885 |
| 800 1356 | MA 2000 Heat | - | 362 | ø1300x2440 | 4,25 | - | - |
| 800 1357 | MA 3000 Heat | - | 566 | ø1500x2695 | 6,25 | - | - |
| 800 1358 | MA 5000 Heat | - | 930 | ø1700x3180 | 9,45 | - | - |
| 800 1363 | MA 10000 Heat | - | 1770 | ø2000x4400 | 17,95 | - | - |
| 800 1253 | MA 600 Cool | - | 148 | ø 780x1900 | 1,28 | - | 550 |
| 800 1254 | MA 1000 Cool | - | 238 | ø1000x2100 | 2,29 | - | 885 |
| 800 1256 | MA 2000 Cool | - | 362 | ø1300x2440 | 4,25 | - | - |
| 800 1257 | MA 3000 Cool | - | 566 | ø1500x2695 | 6,25 | - | - |
| 800 1258 | MA 5000 Cool | - | 930 | ø1700x3180 | 9,45 | - | - |
| 800 1263 | MA 10000 Cool | - | 1770 | ø2000x4400 | 17,95 | - | - |

2.5 ErP data - Technical Data Sheet

| Brand | Model-no. | Model name | ErP profile | ErP rating | AEC - kWh/a | Thermostat setting °C | Volume 40°C water | Heat loss W |
|---|-----------|---------------|--|------------|-------------|-----------------------|-------------------|-------------|
| OSO Hotwater AS | 800 1353 | MA 600 Heat | - | C | - | - | - | 155 |
| OSO Hotwater AS | 800 1354 | MA 1000 Heat | - | C | - | - | - | 175 |
| OSO Hotwater AS | 800 1356 | MA 2000 Heat | - | - | - | - | - | - |
| OSO Hotwater AS | 800 1357 | MA 3000 Heat | - | - | - | - | - | - |
| OSO Hotwater AS | 800 1358 | MA 5000 Heat | - | - | - | - | - | - |
| OSO Hotwater AS | 800 1363 | MA 10000 Heat | - | - | - | - | - | - |
| OSO Hotwater AS | 800 1253 | MA 600 Cool | - | C | - | - | - | 155 |
| OSO Hotwater AS | 800 1254 | MA 1000 Cool | - | C | - | - | - | 175 |
| OSO Hotwater AS | 800 1256 | MA 2000 Cool | - | - | - | - | - | - |
| OSO Hotwater AS | 800 1257 | MA 3000 Cool | - | - | - | - | - | - |
| OSO Hotwater AS | 800 1258 | MA 5000 Cool | - | - | - | - | - | - |
| OSO Hotwater AS | 800 1263 | MA 10000 Cool | - | - | - | - | - | - |
| Directive: 2010/30/EU Regulation: EU 812/2013 | | | Directive: 2009/125/EC Regulation: EU 814/2013 | | | | | |
| Heat loss tested acc. to standard: EN 12897: 2015 | | | | | | | | |

2.2 Intended use

The Maxi is designed for use as a buffer tank for heat-pumps/solar collectors, or as a cooler tank in cooling systems etc.

2.3 CE marking



The CE mark shows that the product complies with the relevant Directives. See Declaration of Conformity at www.osohotwater.com for more information.

The product complies with EU Directives for:

- Low voltage LVD 2014/35/EU
- Electromagnetic compatibility EMC2014/30/EU
- Pressurised equipment PED 2014/68/EU

The safety valve(s) used must be CE marked and conform to PED 2014/68/EU.

3. INSTALLATION INSTRUCTIONS

3.1 Products covered by these instructions

| | | | |
|-----------------|----------|-----------------|----------|
| Maxi Accu Heat: | | Maxi Accu Cool: | |
| 800 1353 | MA 600 | 800 1253 | MA 600 |
| 800 1354 | MA 1000 | 800 1254 | MA 1000 |
| 800 1356 | MA 2000 | 800 1256 | MA 2000 |
| 800 1357 | MA 3000 | 800 1257 | MA 3000 |
| 800 1358 | MA 5000 | 800 1258 | MA 5000 |
| 800 1363 | MA 10000 | 800 1263 | MA 10000 |

3.2 Included in delivery




| Ref no. | Number of | Description |
|---------|-----------|-------------------------------------|
| 1 | 1 | Buffer tank without electric |
| 2 | 1 | Installation manual (this document) |

3.3 Product dimensions

All dimensions in mm.

| Product. | A | B | C | D | E | ∅ |
|----------|------|------|-----|---|---|------|
| MA 600 | 1930 | 1495 | 375 | | | 780 |
| MA 1000 | 2130 | 1650 | 440 | | | 1000 |
| MA 2000 | 2470 | 1650 | 405 | | | 1300 |
| MA 3000 | 2725 | 1710 | 465 | | | 1500 |
| MA 5000 | 3210 | - | - | | | 1700 |
| MA 10000 | 4430 | - | - | | | 2000 |

Tolerance +/- 10 mm.

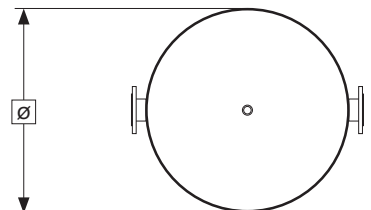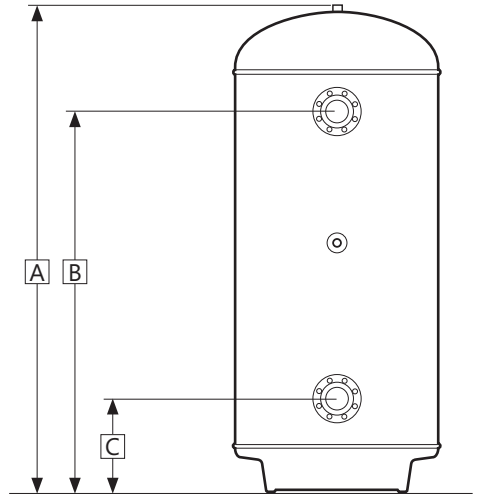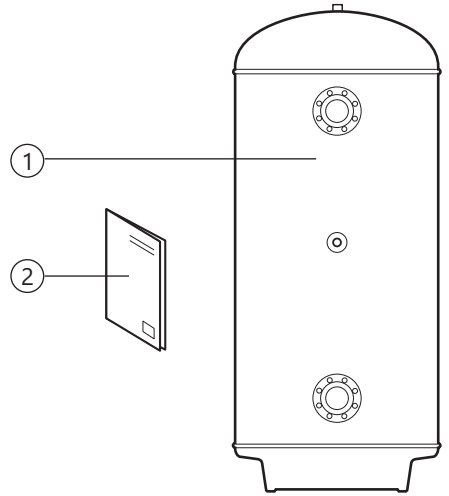

3.3.1 Delivery

The product should be transported carefully as shown, with packaging.





⚠ CAUTION

Pipe stubs, valves etc. should not be used to lift the product as this could cause malfunctions.

3.4 Requirements for installation location and positioning

⚠ CAUTION

- | | |
|---|--|
| ❗ | The product should be placed in a room with a drain, in accordance with the wetroom standard / latest TEK. Alternatively, fit an automatic stop valve with sensor and overflow from safety valve to drain. |
| ❗ | The product should be placed in a dry and permanently frost-free position. |
| ❗ | The product should be placed on a floor or wall suitable for the total weight of the product when in operation. See type plate. |
| ❗ | The product must have a clearance for servicing of 40 cm in front of front / 10 cm over the top connection. |
| ❗ | The product should be easily accessible for servicing and maintenance. |

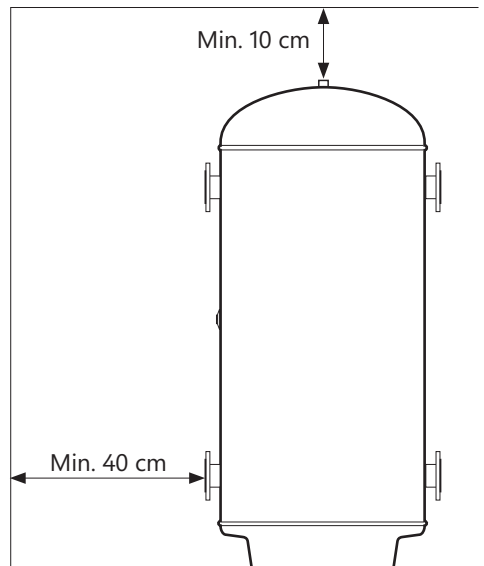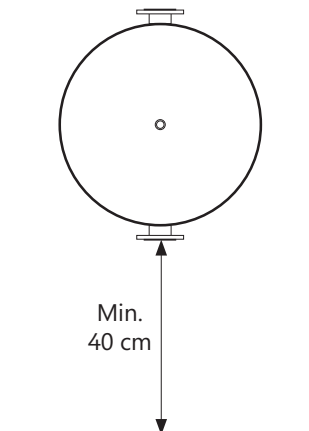

3.5 Pipe installation

Approved pipes of the correct size should be used for installation. The relevant standards and regulations must be followed.


| No. | Dimension | Connection description |
|-----|-----------------------|-------------------------|
| 1 | 3/4" internal thread. | Venting |
| 2 | DN 80 PN 6 | 2 x Return (600 l.) |
| 2 | DN 100 PN 6 | 2 x Return (1000 l.) |
| 2 | To order | Return (2000-10 000 l.) |
| 3 | 1/2" int. thread | Thermometer |
| 4 | DN 80 PN 6 | 2 x Return (600 l.) |
| 4 | DN 100 PN 6 | 2 x Return (1000 l.) |
| 4 | To order | Return (2000-10 000 l.) |

3.5.1 Incoming water pressure

The product is designed for a max. operating pressure of 6 bar.

3.5.2 Fitting pipes

A) Run a pipe of suitable size to the connections shown, and affix with suitable sealant. Unused connections must be plugged securely.

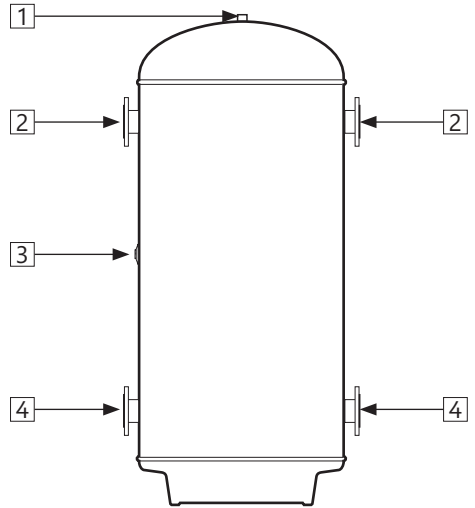

3.5.4 Fitting instructions

| ⚠ CAUTION | |
|-----------|--|
| ❗ | The product should be placed in a room with a drain, in accordance with the wetroom standard / latest TEK. Alternatively, fit an automatic stop valve with sensor and overflow from safety valve to drain. |
| ❗ | The product should be properly aligned vertically and horizontally, on a floor suitable for the total weight of the product when in operation. See type plate. |
| ❗ | The product must have a clearance for servicing of 40 cm in front of front / 10 cm over the top connection. |

3.5.5 Fitting recommendation

| RECOMMENDATION | |
|----------------|--|
| - | For installation in a rooms which does not conform to the wetroom standard, a watertight drip tray with overflow pipe ≥ 18 mm. inside diameter should be fitted under the product, in addition to an automatic stop cock with sensor. This will prevent possible material damage. |

4. INITIAL COMMISSIONING

4.1 Filling with water

First check that all pipes are connected correctly. Then proceed as follows:

- A) Open for venting at a point in the system higher than the top of the tank; use e.g. the 3/4" top connection on the product.
- B) Open the water supply to the product. When water flows out of the venting point, the tank is full and the vent can be sealed.

4.2 Control points

- A) Check that all pipe connections to/from the product are tight and not leaking.
- B) Check that the product is standing firmly vertically and horizontally.

4.3 Emptying of water

| |
|--|
|  WARNING |
|--|

| |
|--|
| The water temperature in the product may exceed 75°C and could cause scalding. So take great care when emptying the product. |
|--|

- A) Shut off/disconnect from the heat source.
- B) Close the incoming water supply.
- C) Open fully for venting – leave open (prevents vacuum).
- D) The product is emptied by disconnecting the lower return valve (1). Product emptied. After emptying, the lower return valve should be reconnected and the vent closed before the product is refilled.

4.4 Handover to end-user

| |
|----------------------------|
| THE INSTALLER MUST: |
|----------------------------|

- | |
|--|
| Brief the end-user on safety and maintenance instructions. |
| Brief the end-user on settings and emptying the product. |
| Hand this installation manual over to the end-user. |
| Enter contact details on the type plate on the product. |

5. USER GUIDE

5.1 Settings

The product does not require any special settings.


6. TROUBLESHOOTING

6.1 Faults and fixes

If problems arise when the product is in use, check for these possible faults:

1. Water leaking from pipe connection. Possible cause: Pipe connection is loose or sealant is insufficient. Possible solution: Tighten pipe connection, replace sealant if necessary.
2. Water leaking from the tank, not the pipe connection. Possible cause: Leakage from the steel tank. Possible solution: Check if it is possible to see the leak point. Contact installer.

If you are unsure what is wrong, contact the installer (see product type plate) or OSO Hot-water AS - see section 7.1.

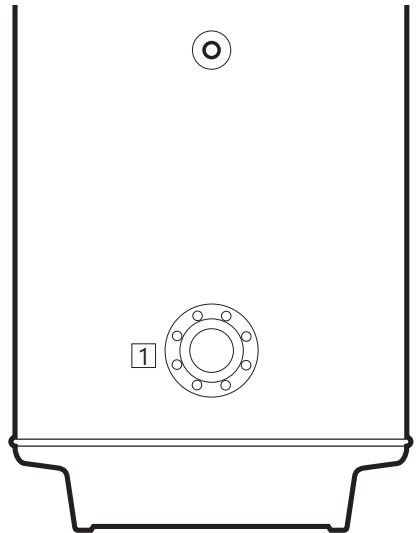

7. WARRANTY CONDITIONS

1. Scope

OSO Hotwater AS ("OSO") warrants for 2 years from the date of purchase, that the Product will: i) conform to OSO specification, ii) be free from defects in materials and workmanship, subject to conditions below. All components carry a 2-year warranty.

The warranty is voluntarily extended by OSO to 5 years for the stainless steel inner tank. This extended warranty only applies to Products purchased by a consumer, that has been installed for private use and that has been distributed by OSO or by a distributor where the Products have been originally sold by OSO. The extended warranty does not apply to Products purchased by commercial entities or for Products that have been installed for commercial use. These shall be subject only to the mandatory provisions of the law. The conditions and limitations set out below shall apply.

2. Coverage

If a defect arises and a valid claim is received within the statutory warranty period, at its option and to the extent permitted by law, OSO shall either: i) repair the defect, or; ii) replace the product with a product that is identical or similar in function, or; iii) refund the purchase price.

If a defect arises and a valid claim is received after the statutory warranty period has expired, but within the extended warranty period, OSO will supply a product that is identical or similar in function. OSO will in such cases not cover any other associated costs.

Any exchanged Product or component will become the legal property of OSO. Any valid claim or service does not extend the original warranty. The replacement Product or part does not carry a new warranty.

3. Conditions

The Product is manufactured to suit most public water supplies. However, there are certain water chemistries (outlined below) that can have a detrimental effect on the Product and its life expectancy. If there are uncertainties regarding water quality, the local water supply authority can supply the necessary data. The warranty applies only if the conditions set out below are met in full:

- The Product has been installed by a professional installer, in accordance with the instructions in the installation manual and all relevant Codes of Practice and Regulations in force at the time of installation.
- The Product has not been modified in any way, tampered with or subjected to misuse and no factory fitted parts have been removed for unauthorized repair or replacement.
- The Product has only been connected to a domestic mains water supply in compliance with the European Drinking Water Directive EN 98/83 EC, or latest version. The water

should not be aggressive, i.e. the water chemistry must comply with the following:

| | |
|-------------------------------------|----------------|
| - Chloride | < 250 mg / L |
| - Electric Conductivity (EC) @ 25°C | < 750 uS / cm |
| - Saturation Index (LSI) @ 80°C | > -1.0 / < 0.8 |
| - pH level | > 6.0 / < 9.5 |

- The immersion heater has not been exposed to hardness levels exceeding 10°dH (180 ppm CaCO₃). A water softener is recommended in such cases.
- Any disinfection has been carried out without affecting the Product in any way. The Product shall be isolated from any system chlorination.
- The Product has been in regular use from the date of installation. If the Product is not intended to be used for 60 days or more, it must be drained.
- Service and/or repair shall be done according to the installation manual and all relevant codes of practice. Any replacement parts used shall be original OSO spare parts.
- Any third-party costs associated with any claim has been authorized in advance by OSO in writing.
- The purchase invoice and/or installation invoice, a water sample as well as the defective product is made available to OSO upon request.

Failure to follow these instructions and conditions may result in product failure, and water escaping from the Product.

4. Limitations

The warranty does not cover:

- Any fault or costs arising from incorrect installation, incorrect application, lack of regular maintenance in accordance with the installation manual, neglect, accidental or malicious damage, misuse, any alteration, tampering or repair carried out by a non-professional, any fault arising from the tampering with or removal of any factory fitted safety components or measures.
- Any consequential damage or any indirect loss caused by any failure or malfunction of the Product.
- Any pipework or any equipment connected to the Product.
- The effects of frost, lightning, voltage variation, lack of water, dry boiling, excess pressure or chlorination procedures.
- The effects of stagnant (de-aerated) water if the Product has been left unused for more than 60 days consecutively.
- Damage caused during transportation. Buyer shall give the carrier notice of such damage.
- Costs arising if the Product is not immediately accessible for servicing.

These warranties do not affect the Buyer's statutory rights.

7.1 Customer service

In case of problems that cannot be resolved with the aid of the troubleshooting guide in this installation manual, contact either:

- A) The installer who supplied the product.
- B) OSO Hotwater AS: Tel.: +47 32 25 00 00
oso@oso.no / www.oso.no

8. REMOVING THE PRODUCT

8.1 Removal

- A) Disconnect the power supply.
- B) Shut off incoming cold water supply.
- C) Empty the product of water – see section 4.4.

- D) Disconnect all pipes.
- E) The product can now be removed.

8.2 Returns scheme

This product is recyclable and should be taken to the environmental recycling centre. If the product is to be replaced with a new one, the installer can take the old cylinder away for recycling.





OSO Hotwater AS

Industriveien 1
3300 Hokksund - Norway
Tel: + 47 32 25 00 00
oso@oso.no
www.osohotwater.com

© Alle deler av denne montasjeanvisningen er beskyttet av åndsverksloven og skal ikke reproduseres eller distribueres uten skriftlig avtale med produsenten. Forandringer forbeholdes.

© This installation manual and all its content is protected by copyright and may be reproduced or distributed only with written consent from the manufacturer. We reserve the right to make changes without notice.